
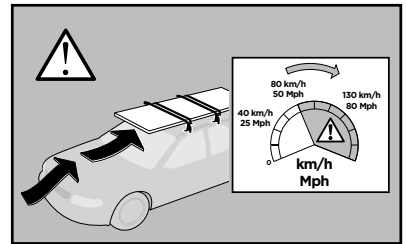
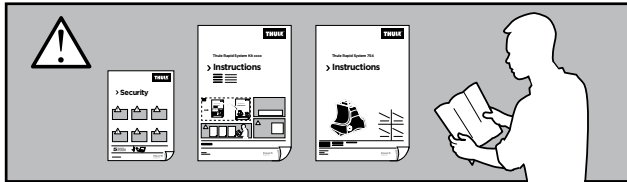
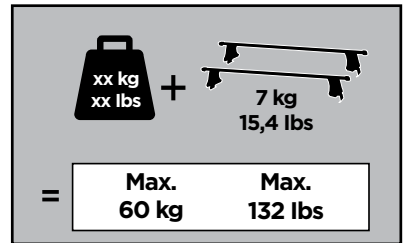


# Thule Rapid System Kit 1328

# > Instructions


VW Touran, 5-dr MPV, 03-15

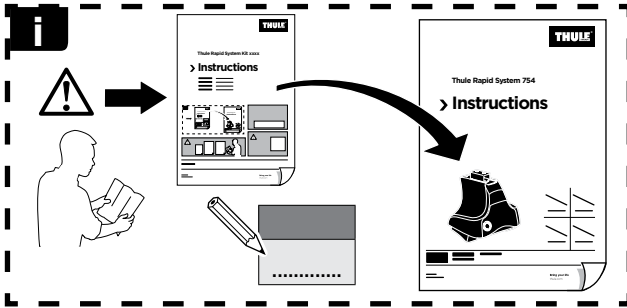

ISO 11154-E



07 x2




571 x2



x1

65 x2






572 x2



x1

1



	X (scale)	X (mm)	X (inch)
VW Touran, 5-dr MPV, 03-15	46	1111	43 <sup>3</sup> / <sub>4</sub>

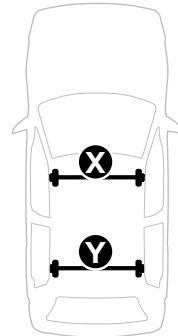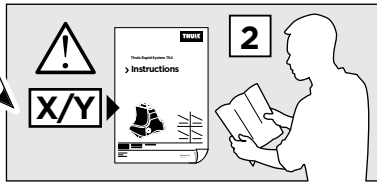
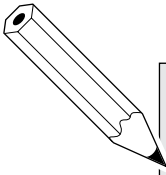


	Y (scale)	Y (mm)	Y (inch)
VW Touran, 5-dr MPV, 03-15	42,5	1076	42 <sup>3</sup> / <sub>8</sub>

# 2

VW Touran, 5-dr MPV, 03-15

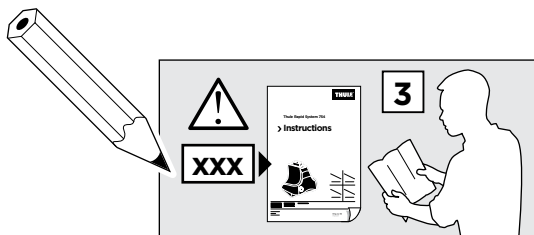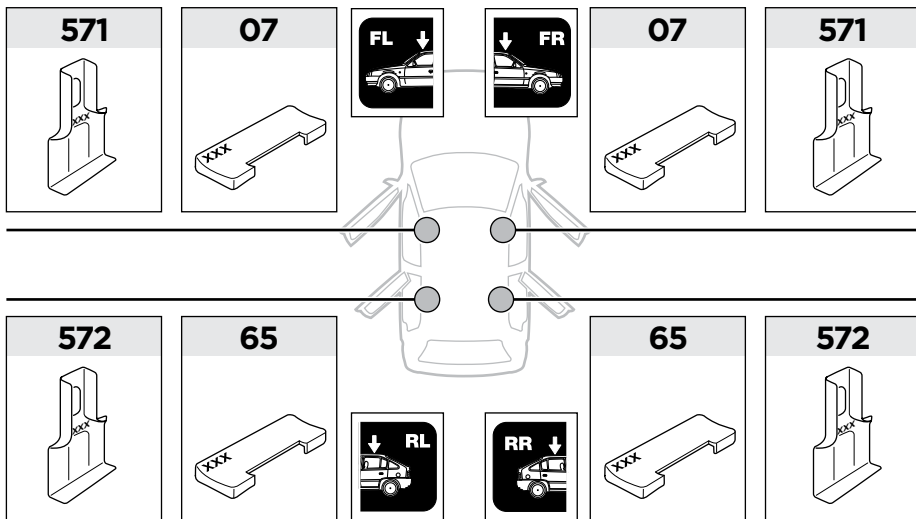

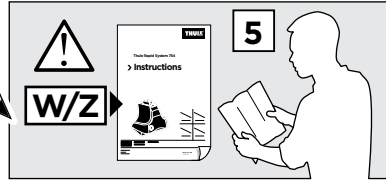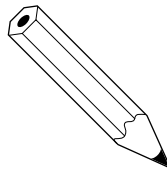**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>VW Touran, 5-dr MPV, 03-15</b>	<b>400</b>	<b>770</b>	<b>15 <sup>3</sup>/<sub>4</sub></b>	<b>30 <sup>3</sup>/<sub>8</sub></b>

