







# 1

## Kit 187194


FORD Tourneo Custom (Mk. II), 5-dr Bus, 24-  
FORD Transit Custom (Mk. II), 4/5-dr Van, 24-  
VOLKSWAGEN Caravelle (T7), 4/5-dr Bus, 25-  
VOLKSWAGEN Transporter (T7), 4/5-dr Van, 25-




This kit is only for vehicles with fixpoint mounting without glass roof.

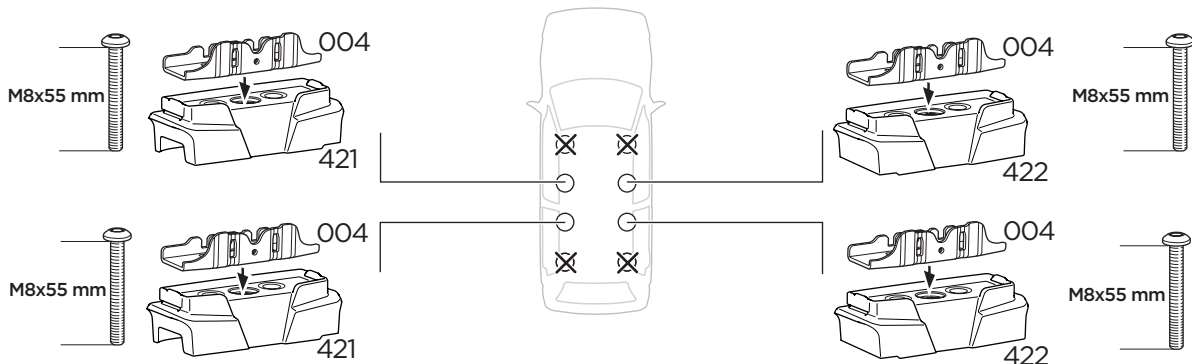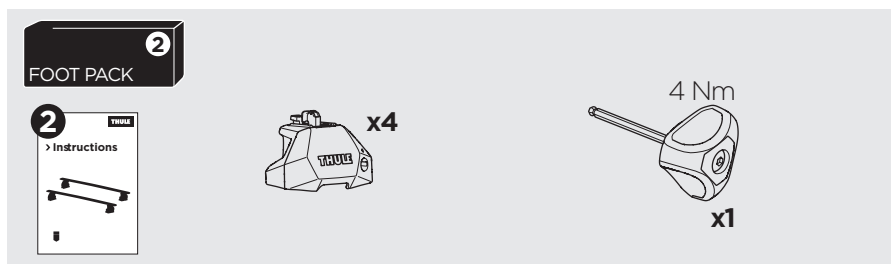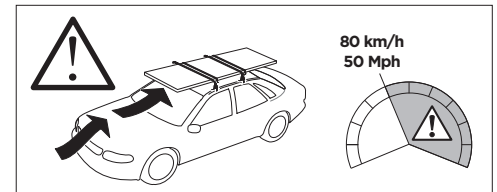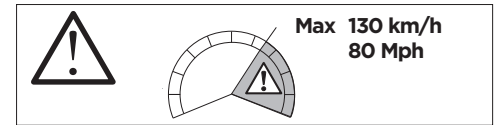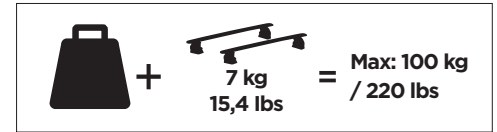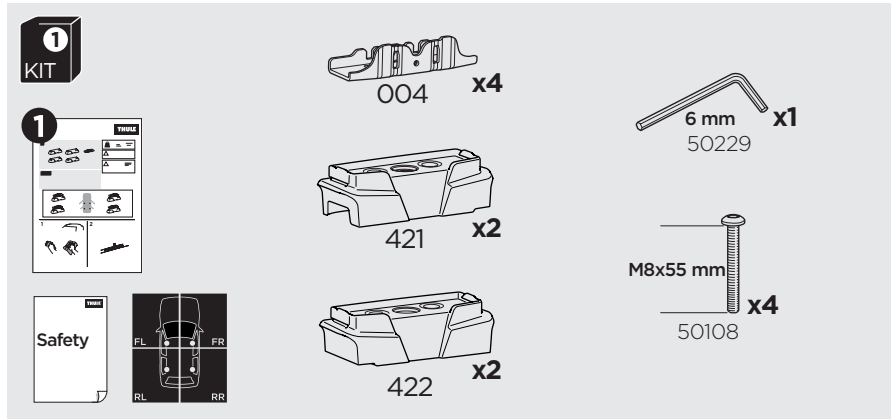



### 1

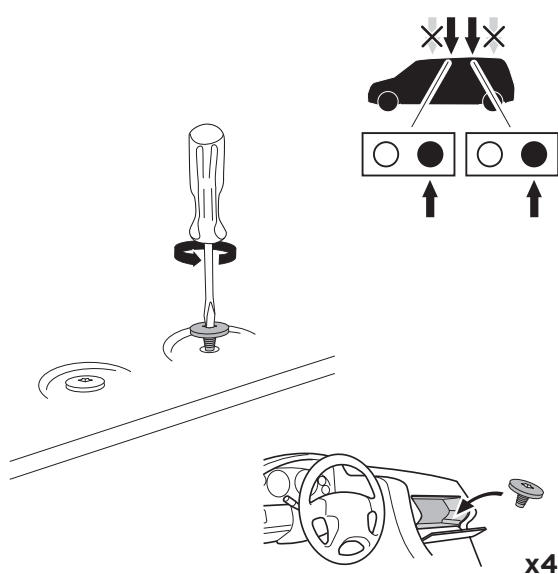


### 2

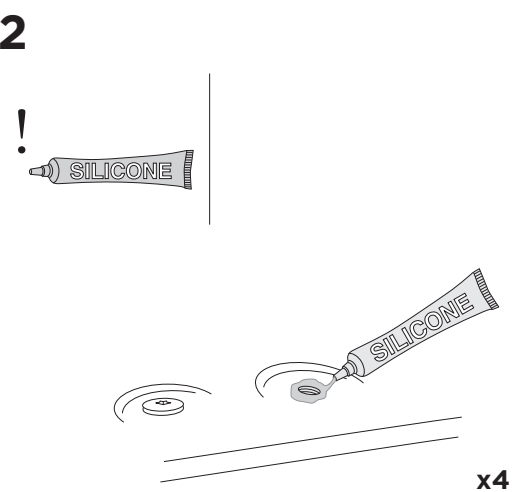


# 3

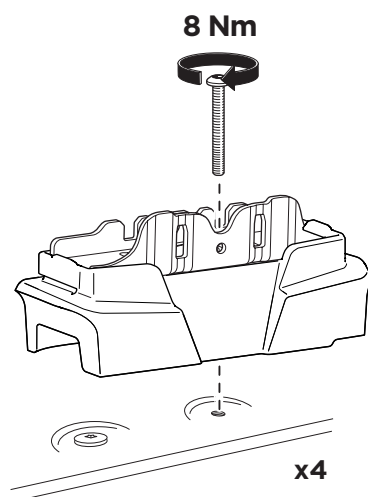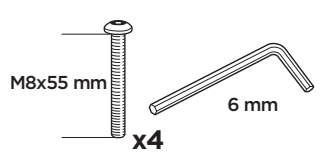

## A

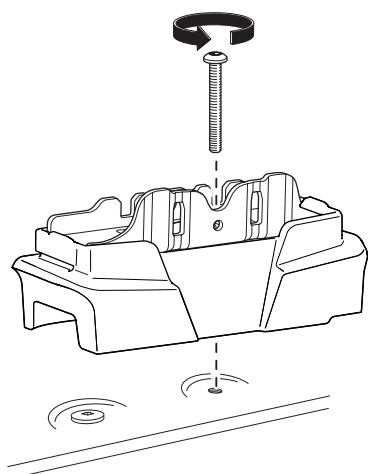

## B

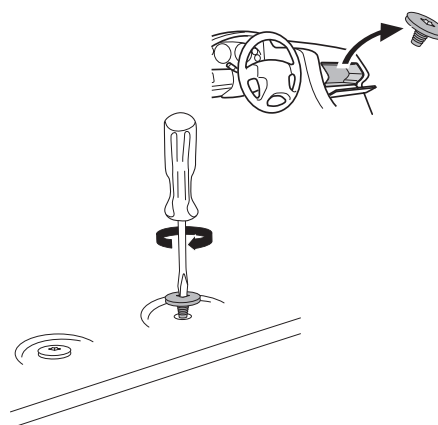

# i

